

Návod na nastavení routeru D-Link DIR-809




AKTIVACE SLUŽEB POMOCÍ INSTALÁTORU

Po zapojení Vašeho routeru podle samoinstalačního manuálu si otevřete Váš internetový prohlížeč (např. Internet Explorer, Mozilla Firefox, Google Chrome) a do pole pro zadávání www adresy zadáte:


192.168.0.1

Další postup:

Po zadání a potvrzení klávesou **Enter** se Vám zobrazí uvítací obrazovka s automatickým průvodcem nastavení zařízení, tento průvodce má 5 kroků. Pokračujte stisknutím tlačítka **Next**.

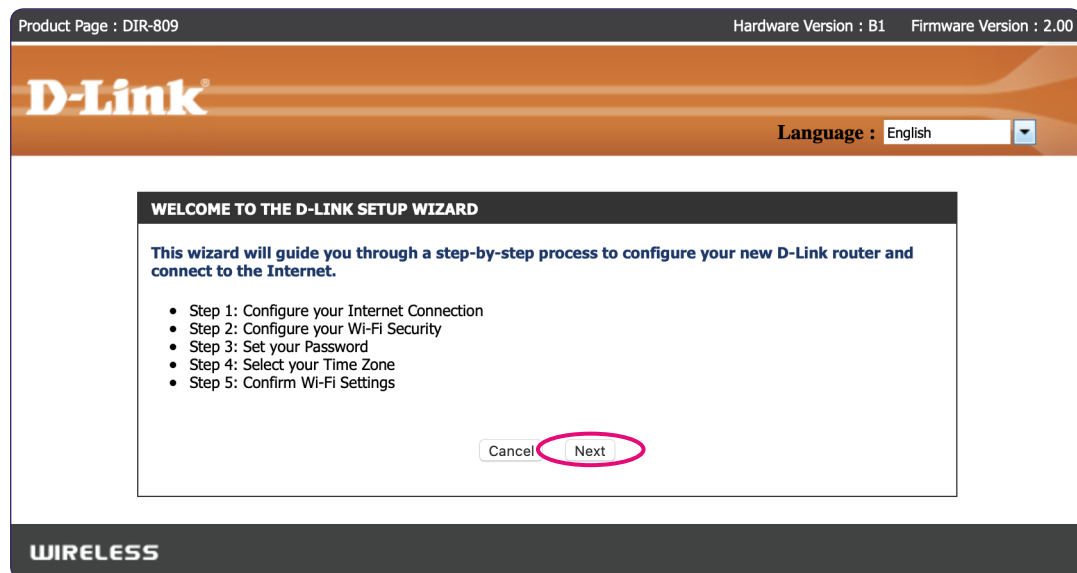

1. V kroku č. 1 router detekuje připojení k internetu, které je fyzicky připojeno ve žluté zdířce s nápisem **INTERNET**.

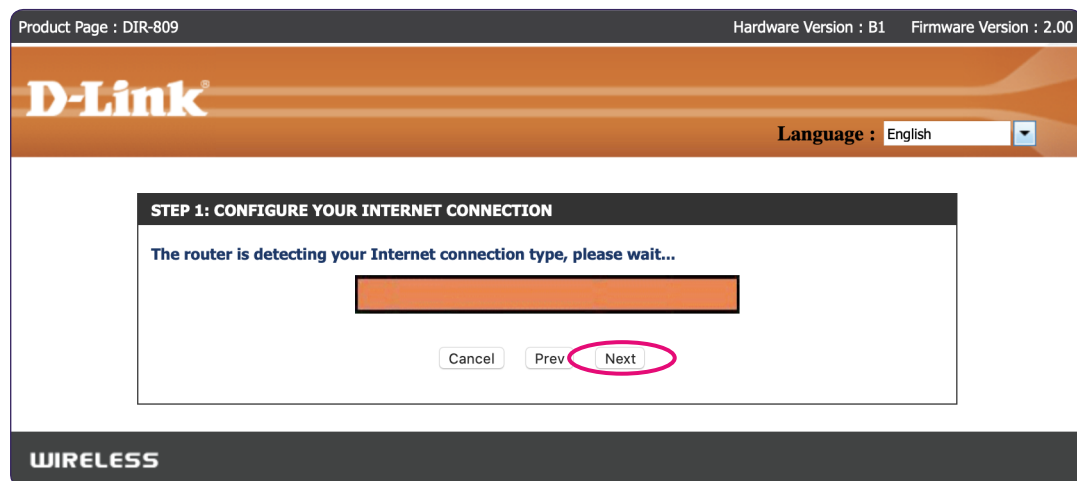

2. Pokračujte stisknutím **Next** a zobrazí se krok č. 2, ve kterém je přednastavená WiFi síť a heslo pro obě pásma. Tady lze změnit výchozí nastavení. Heslo musí obsahovat minimálně 8 znaků.

Product Page : DIR-809 Hardware Version : B1 Firmware Version : 2.00

D-Link Language : English

STEP 2: CONFIGURE YOUR WI-FI SECURITY

Give your Wi-Fi network a name and a password. (2.4GHz Band)

Wi-Fi Network Name(SSID) :
dlink-2839 (Using up to 32 characters)

Wi-Fi Password :
fqwhn87634 (Between 8 and 63 characters)

Give your Wi-Fi network a name and a password. (5GHz Band)

Wi-Fi Network Name(SSID) :
dlink-2839-5GHz (Using up to 32 characters)

Wi-Fi Password :
fqwhn87634 (Between 8 and 63 characters)

Cancel Prev **Next**

WIRELESS

3. Pokračujte stisknutím tlačítka **Next** na krok č. 3, kde se nastavuje heslo pro přístup do zařízení pro pozdější konfiguraci nebo změnu hesla.

Product Page : DIR-809 Hardware Version : B1 Firmware Version : 2.00

D-Link Language : English

STEP 3: SET YOUR PASSWORD

By default, your new D-Link Router does not have a password configured for administrator access to the Web-based configuration pages. To secure your new networking device, please set and verify a password below.

Password :

Verify Password :

Cancel Prev **Next**

WIRELESS

4. Pokračujeme tlačítkem **Next** na krok č. 4, kde se potvrzuje časové pásmo: (GMT+01:00) Amsterdam, Berlín, Bern, Rome, Stockholm, Vienna.

The screenshot shows the D-Link router configuration interface. At the top, it displays 'Product Page : DIR-809', 'Hardware Version : B1', and 'Firmware Version : 2.00'. The D-Link logo is on the left, and a language dropdown menu is set to 'English'. The main content area is titled 'STEP 4: SELECT YOUR TIME ZONE' and contains the instruction: 'Select the appropriate time zone for your location. This information is required to configure the time-based options for the router.' Below this is a dropdown menu showing '(GMT+01:00) Amsterdam, Berlin, Bern, Rome, Stockholm, Vienna'. At the bottom of the form are three buttons: 'Cancel', 'Prev', and 'Next'. The 'Next' button is circled in red.

5. Pokračujte stiskem tlačítka **Next** na poslední krok č. 5, kde je rekapitulace nastavení zařízení

The screenshot shows the D-Link router configuration interface for Step 5: 'STEP 5: CONFIRM WI-FI SETTINGS'. It includes the same header information as the previous screenshot. The main content area contains the instruction: 'Below is a detailed summary of your Wi-Fi security settings. Please print this page out, or write the information on a piece of paper, so you can configure the correct settings on your Wi-Fi devices.' The settings are listed as follows: 'Wi-Fi Network Name(SSID) 2.4GHz : dlink-2839' and 'Wi-Fi Password : fqwhn87634', followed by 'Wi-Fi Network Name(SSID) 5GHz : dlink-2839-5GHz' and 'Wi-Fi Password : fqwhn87634'. At the bottom are 'Cancel', 'Prev', and 'Next' buttons, with 'Next' circled in red.

Po úspěšném nastavení se vám zobrazí přihlašovací obrazovka k zařízení.

The screenshot shows the D-Link router login page. The header information is the same as in the previous screenshots. The main content area is titled 'LOGIN' and contains the text 'Login to the router :'. Below this are two input fields: 'User Name : Admin' and 'Password :'. The password field has a small key icon and a dropdown arrow. To the right of the password field is a 'Login' button.

NÁVOD NA ZMĚNA HESLA

Po zapojení Vašeho routeru podle samoinstalačního manuálu si otevřete Váš internetový prohlížeč (např. Internet Explorer, Mozilla Firefox, Google Chrome) a do pole pro zadávání www adresy zadáte:


192.168.0.1

Další postup:


Po zadání a potvrzení klávesou **Enter** si od Vás router vyžádá **uživatelské jméno** a **heslo** (User Name, Password). Do pole s heslem je třeba zadat vaše heslo, které jste zadali při **prvním nastavením zařízení**.

Pokud si heslo nepamätujete, je nutné resetovat zařízení do továrního nastavení a provést jeho konfiguraci znovu. (Na zadní straně u antény je otvor, který je označen nápisem „reset“. Je potřeba jej při zapnutém stavu držet promáčknutý po dobu 30 vteřin).

Pokračujte tlačítkem **Login**.

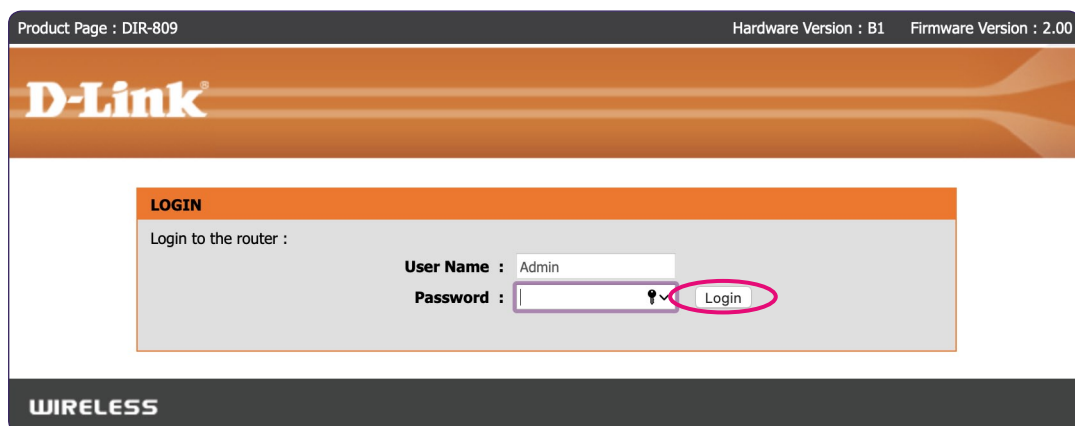

Po zdárném přihlášení by se Vám mělo zobrazit administrační rozhraní routeru. Pokud se Vám zobrazí, postupujete správně.

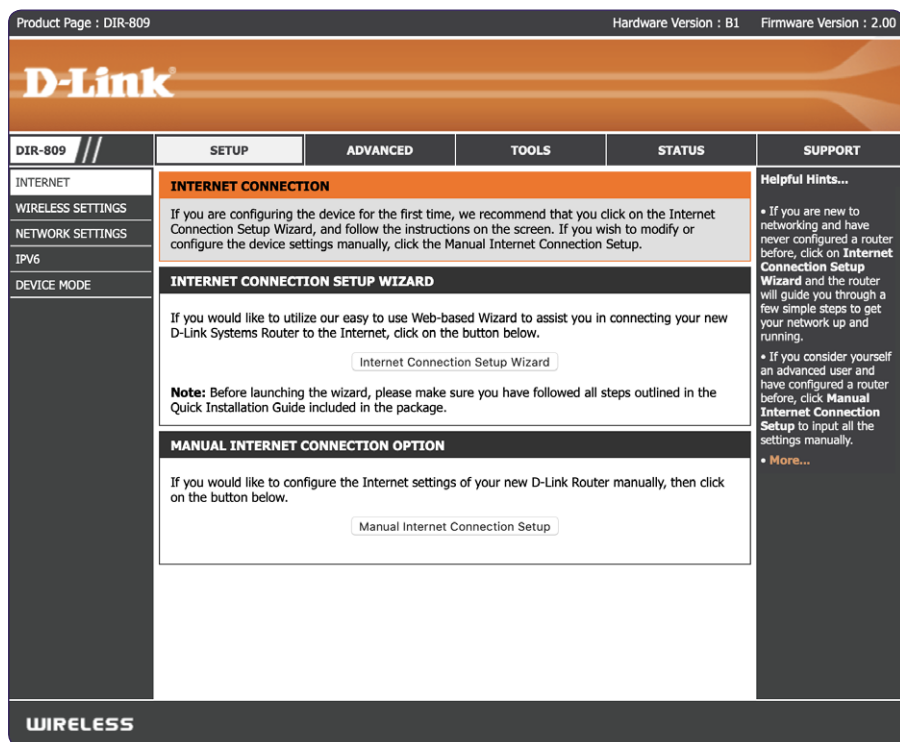

Přejděte na tlačítko Setup a v levém menu zvolte položku **Wireless Settings**.
V dolní části administračního rozhraní zvolte tlačítko **Manual Wireless Network Setup**.

Product Page : DIR-809 Hardware Version : B1 Firmware Version : 2.00

D-Link

DIR-809	SETUP	ADVANCED	TOOLS	STATUS	SUPPORT
INTERNET	WIRELESS SETTINGS The following Web-based wizards are designed to assist you in your wireless network setup and wireless device connection. Before launching these wizards, please make sure you have followed all steps outlined in the Quick Installation Guide included in the package. WIRELESS NETWORK SETUP WIZARD This wizard is designed to assist you in your wireless network setup. It will guide you through step-by-step instructions on how to set up your wireless network and how to make it secure. <input type="button" value="Wireless Connection Setup Wizard"/> Note: Some changes made using this Setup Wizard may require you to change some settings on your wireless client adapters so they can still connect to the D-Link Router. ADD WIRELESS DEVICE WITH WPS (WI-FI PROTECTED SETUP) WIZARD This wizard is designed to assist you in connecting your wireless device to your wireless router. It will guide you through step-by-step instructions on how to get your wireless device connected. Click the button below to begin. <input type="button" value="Add Wireless Device with WPS"/> MANUAL WIRELESS NETWORK SETUP If your wireless network is already set up with Wi-Fi Protected Setup, manual configuration of the wireless network will destroy the existing wireless network. If you would like to configure the wireless settings of your new D-Link Systems Router manually, then click on the Manual Wireless Network Setup button below. <input type="button" value="Manual Wireless Connection Setup"/>	Helpful Hints... <ul style="list-style-type: none">• If you already have a wireless network setup with Wi-Fi Protected Setup, click on Add Wireless Device with WPS to add new device to your wireless network.• If you are new to wireless networking and have never configured a wireless router before, click on Wireless Connection Setup Wizard and the router will guide you through a few simple steps to get your wireless network up and running.• If you consider yourself an advanced user and have configured a wireless router before, click Manual Wireless Connection Setup to input all the settings manually.• More...			
WIRELESS SETTINGS					
NETWORK SETTINGS					
IPv6					
DEVICE MODE					

WIRELESS

V sekci **Wireless Network Settings – Wireless Network Name** si nastavte název Vaší nové bezdrátové sítě (předvyplněno „Dlink“). Další nastavení není nutno měnit.

Product Page : DIR-809 Hardware Version : B1 Firmware Version : 2.00

D-Link

DIR-809 // SETUP ADVANCED TOOLS STATUS SUPPORT

INTERNET
WIRELESS SETTINGS
NETWORK SETTINGS
IPv6
DEVICE MODE

WIRELESS NETWORK

Use this section to configure the wireless settings for your D-Link router. Please note that changes made in this section may also need to be duplicated on your wireless client.

To protect your privacy you can configure wireless security features. Securing your wireless network is important as it is used to protect the integrity of the information being transmitted. The router is capable of 4 types of wireless security; WEP, WPA only, WPA2 only, and WPA/WPA2 (auto-detect).

Save Settings Don't Save Settings

WIRELESS NETWORK SETTINGS

Wireless Band : 2.4GHz Band

Enable Wireless : Always New Schedule

Wireless Network Name : **dlink-2839** (Also called the SSID)

802.11 Mode : Mixed 802.11n, 802.11g and 802.11b

Enable Auto Channel Scan :

Wireless Channel : 02

Transmission Rate : Best (automatic) (Mbit/s)

Channel Width : 20/40 MHz(Auto)

Visibility Status : Visible Invisible

WIRELESS SECURITY MODE

Security Mode : WPA-Personal

WPA

Use **WPA** or **WPA2** mode to achieve a balance of strong security and best compatibility. This mode uses WPA for legacy clients while maintaining higher security with stations that are WPA2 capable. Also the strongest cipher that the client supports will be used. For best security, use **WPA2 Only** mode. This mode uses AES(CCMP) cipher and legacy stations are not allowed access with WPA security. For maximum compatibility, use **WPA Only**. This mode uses TKIP cipher. Some gaming and legacy devices work only in this mode.

To achieve better wireless performance use **WPA2 Only** security mode (or in other words AES cipher).

WPA Mode : Auto(WPA or WPA2)

Cipher Type : TKIP and AES

Group Key Update Interval : 3600 (seconds)

PRE-SHARED KEY

Enter an 8- to 63-character alphanumeric pass-phrase. For good security it should be of ample length and should not be a commonly known phrase.

Pre-Shared Key : fqwhn87634

WIRELESS NETWORK SETTINGS

Wireless Band : 5GHz Band

Enable Wireless : Always New Schedule

Wireless Network Name : dlink-2839-5GHz (Also called the SSID)

802.11 Mode : Mixed 802.11ac, 802.11n and 802.11a

Enable Auto Channel Scan :

Wireless Channel : 44

Transmission Rate : Best (automatic) (Mbit/s)

Channel Width : 20/40/80 MHz(Auto)

Visibility Status : Visible Invisible

WIRELESS SECURITY MODE

Security Mode : WPA-Personal

WPA

Use **WPA** or **WPA2** mode to achieve a balance of strong security and best compatibility. This mode uses WPA for legacy clients while maintaining higher security with stations that are WPA2 capable. Also the strongest cipher that the client supports will be used. For best security, use **WPA2 Only** mode. This mode uses AES(CCMP) cipher and legacy stations are not allowed access with WPA security. For maximum compatibility, use **WPA Only**. This mode uses TKIP cipher. Some gaming and legacy devices work only in this mode.

To achieve better wireless performance use **WPA2 Only** security mode (or in other words AES cipher).

WPA Mode : Auto(WPA or WPA2)

Cipher Type : TKIP and AES

Group Key Update Interval : 3600 (seconds)

PRE-SHARED KEY

Enter an 8- to 63-character alphanumeric pass-phrase. For good security it should be of ample length and should not be a commonly known phrase.

Pre-Shared Key : **fqwhn87634**

Save Settings Don't Save Settings

Helpful Hints...

- Changing your Wireless Network Name is the first step in securing your wireless network. We recommend that you change it to a familiar name that does not contain any personal information.

- Enable Auto Channel Selection let the router can select the best possible channel for your wireless network to operate on.

- Enabling Hidden Mode is another way to secure your network. With this option enabled, no wireless clients will be able to see your wireless network when they perform a scan to see what's available. In order for your wireless devices to connect to your router, you will need to manually enter the Wireless Network Name on each device.

- If you have enabled Wireless Security, make sure you write down the WEP Key or Passphrase that you have configured. You will need to enter this information on any wireless device that you connect to your wireless network.

• [More...](#)

Do kolonky **PRE-SHARED KEY** vyplňte libovolné heslo. Pro posílení bezpečnosti sítě zvolte silné a bezpečné heslo (heslo musí mít minimálně 8 znaků). Ostatní volby ponechte předvyplněné tak, jak jsou.

Závěrem je třeba veškeré provedené změny uložit stisknutím tlačítka **Save Settings**, které se nachází v dolní části stránky.